

INSTALLATION INSTRUCTIONS VERTICAL FOUR-TRACK-OUTSIDE MOUNT

CAUTION: DO NOT roll in the screen until it has been installed using the following procedures. (Pre-rolling the screen may distort the jamb and bind the vents or pull a wrinkle in the screen during installation.)

Step One

Set unit into opening dry (uncaulked). DO NOT REMOVE INSTALLATION CLIP IN THE UNIT. Be sure the window fits properly.

Remove the unit and carefully caulk the existing opening. Proper caulking is one of the most important elements of installation. Pay close attention to the joints, where the horizontal member meets the vertical.

Main frame should be as square as possible within the opening. Make sure vents are all the way down. Place unit in opening again and place a screw in each corner (A).

This unit has been shipped with plastic spacers positioned to assist you during installation. On the top left and right sides of the top vent you will see thin plastic spacers adjacent to the vent latches and the main jamb. The purpose of these spacers is to maintain proper vent clearance during installation.

Place screw in left main jamb adjacent to the top of the bottom vent (B). Place another screw in right main jamb (C).

Step Two


Next, raise all vents, leaving the spacers in place until lower edge of the vent is even with the top screws you just installed (B & C). Making sure spacers are snug, install screws on each side of the frame at the top of the vent (D & E).

Step Three

Repeat the procedure until you have completed the installation by installing the top screws. Maximum 3 screws in each jamb.

Step Four

When finished, remove and discard all plastic spacers. Install the balance of the screws in the main header and sill.

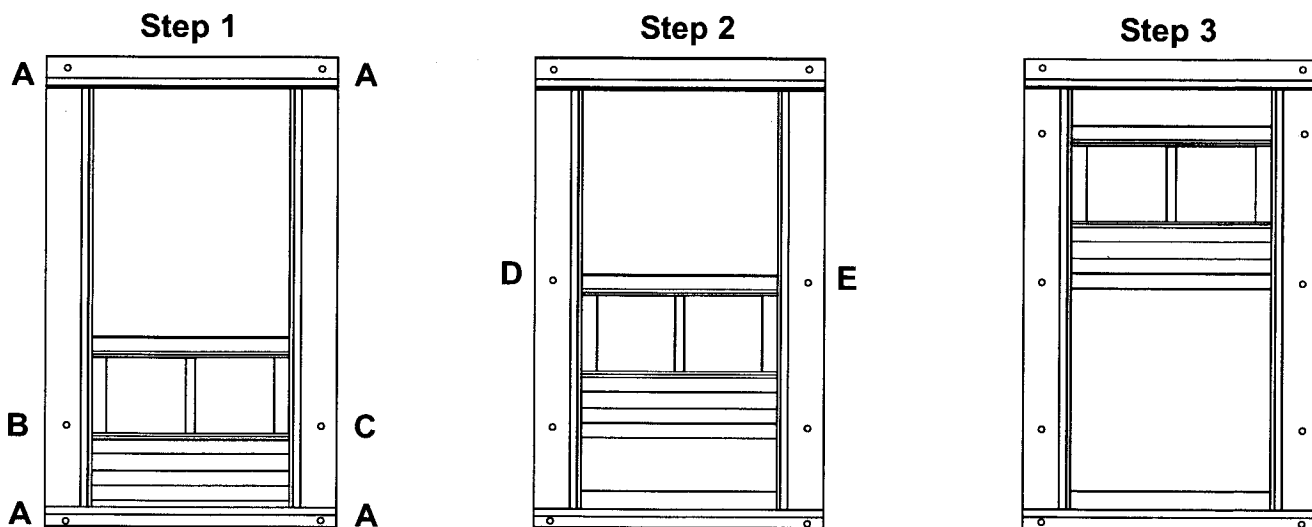

OUTSIDE MOUNT